

**NAME**

copy2mci – manual page for copy2mci 0.3

**SYNOPSIS**

**copy2mci** [*OPTION*]... [*filename*]

**DESCRIPTION**

copy2mci – download utility for MCI family keyboards.

COPY a configuration file (mwx binary keytable) TO MCI keyboards via USB. In addition 'copy2mci' can read out the binary keytable to a file and send commands to the keyboard or read the keyboard version string.

**OPTIONS**

- h, --help**  
Prints this usage message and exits.
- V, --version**  
Print version and exits.
- v, --verbose**  
Print verbose messages.
- leds**  
Use keyboard leds as an activity indicator.
- u#, --usb=#**  
Select usb device index (default: 1).
- sxy.., --sendcmd=xy..**  
Send command xy.. (hex) to keyboard.
- r, --read**  
Read binary keytable to a mwx file.
- i, --info**  
Show keyboard version string.

**EXAMPLES****Copy keytable to the keyboard:**

copy2mci <filename>

**Read keytable from keyboard:**

copy2mci --read <filename>

**Read device info block:**

copy2mci --info

**Send command:**

copy2mci --sendcmd=xyxy...xy

**NOTES:**

- (1) If there is no file extension then '.mwx' is appended.
  - (2) By default the devices 'hiddev#' are limited in read/write access.
- The easiest way is to run this tool with 'root' grants to avoid access problems.

**COPYRIGHT**

Copyright © 2008 PrehKeyTec GmbH.